OUTER VENTILATION HOOD

AH-11 100
AH-11 160

EN INSTALLATION INSTRUCTION

BLAUBERG

PURPOSE

The outer ventilation hood is designed to prevent ingress of water and foreign objects into the ventilation equipment from outside.

THE UNIT SHOULD NOT BE OPERATED BY CHILDREN OR PERSONS WITH REDUCED PHYSICAL, MENTAL, OR SENSORY CAPACITIES, OR THOSE WITHOUT THE APPROPRIATE TRAINING.

THE UNIT MUST BE INSTALLED AND CONNECTED ONLY BY PROPERLY QUALIFIED PERSONNEL AFTER THE APPROPRIATE BRIEFING.

THE CHOICE OF UNIT INSTALLATION LOCATION MUST PREVENT UNAUTHORISED ACCESS BY UNATTENDED CHILDREN.

OVERALL DIMENSIONS

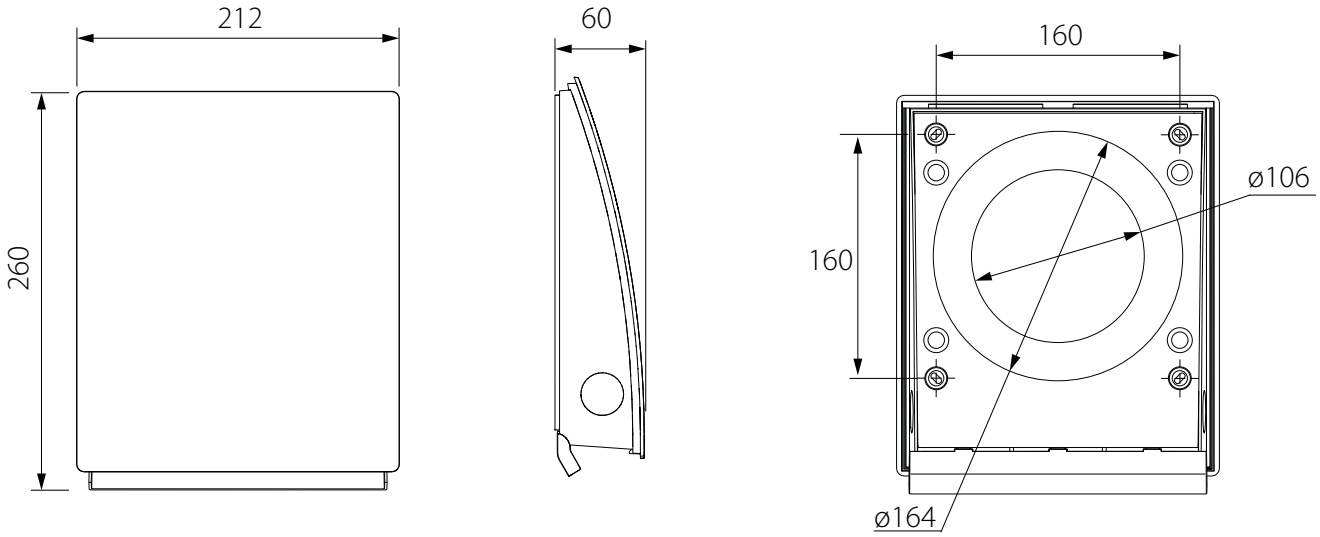

AH-11 160

To install an air duct with a diameter of 160 mm, remove the adapter on the back wall.

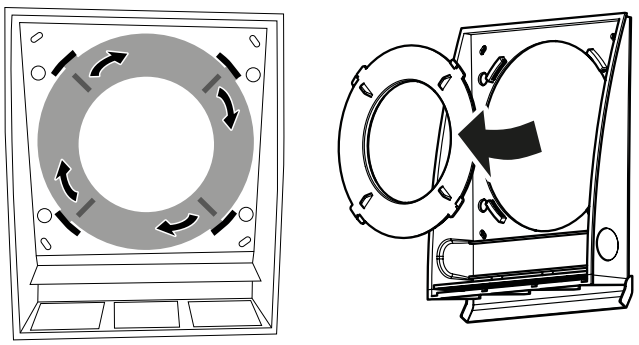

OUTER VENTILATION HOOD MOUNTING

1. The external ventilation hood is installed after final fixation of the duct according to the air ventilator manual.

WARNING! If the mounting place is located at high altitude, please refer to a mounting.

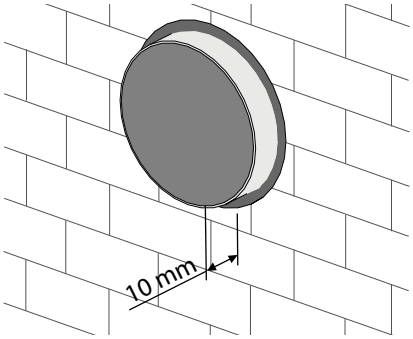

2. Remove the outer ventilation hood to gain access to the fixing holes. To do this, pull the front part towards you from below.

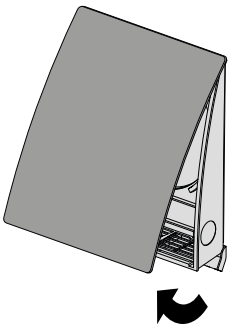

3. Mark the fixing holes of the outer ventilation hood and drill 4 6x40 dowel holes to a depth of 50 mm. Use the back of the ventilation hood for easy marking.

Install the supplied 6x40 dowels into the holes.

Fix the rear part of the ventilation hood to the wall using the supplied 4x40 screws.

The supplied fixing products are intended for fixing the hood on brick or concrete walls only.

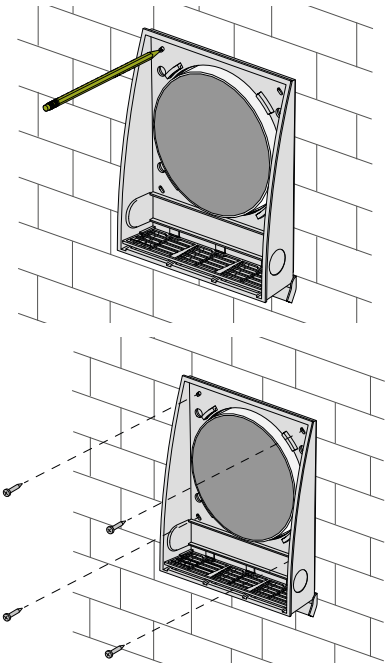

4. Cover the ventilation hood with the front part.

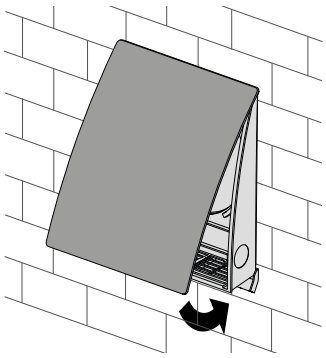

BLAUBERG

www.blaubergventilatoren.de
B113-9EN-02